

Local Display


Enabling Local Display on the Eagle Eye VMS

This article details how to display cameras/layouts on a local monitor or to a browser over a local network.


Local Display via Monitor

1. Please connect the monitor to either the HDMI or display port on the Eagle Eye Bridge/CMVR.


ⓘ Eagle Eye does not support cables over 15 feet or any third-party HDMI extenders/converters.

2. On the Eagle Eye Cloud VMS Dashboard, press the cog button  next to the Eagle Eye Bridge/CMVR with the attached monitor to open **Bridge Settings**.

3. Navigate to the "Local Display" tab.

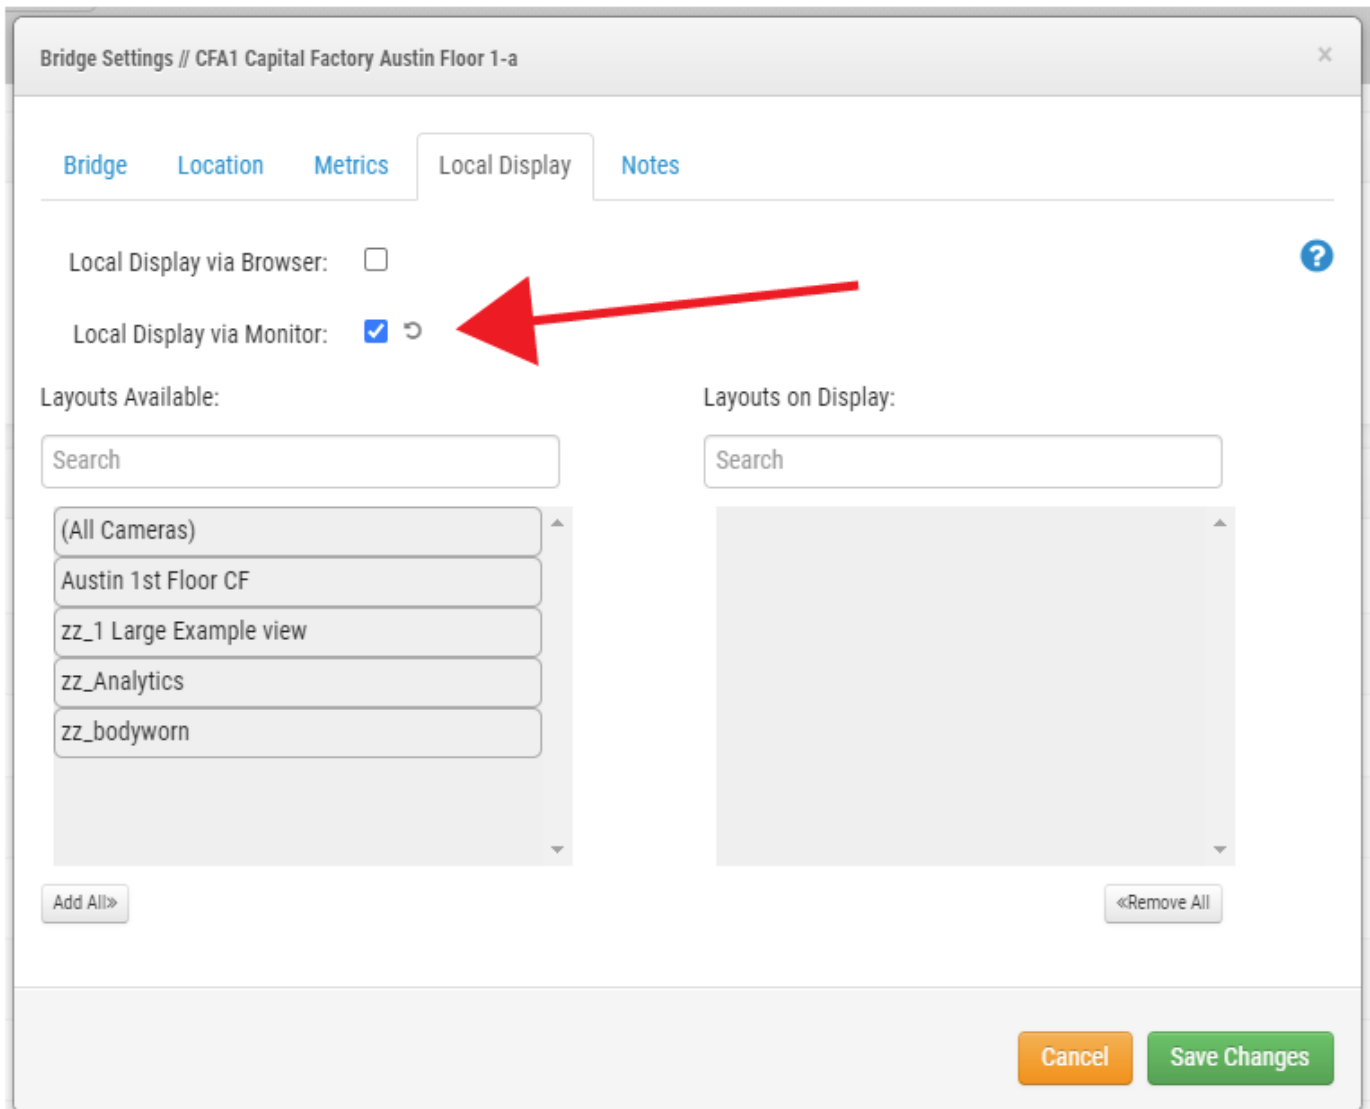

2. Check the box next to **Local Display via Monitor**.
3. Drag a layout from **Layouts Available** to the **Layouts on Display**.

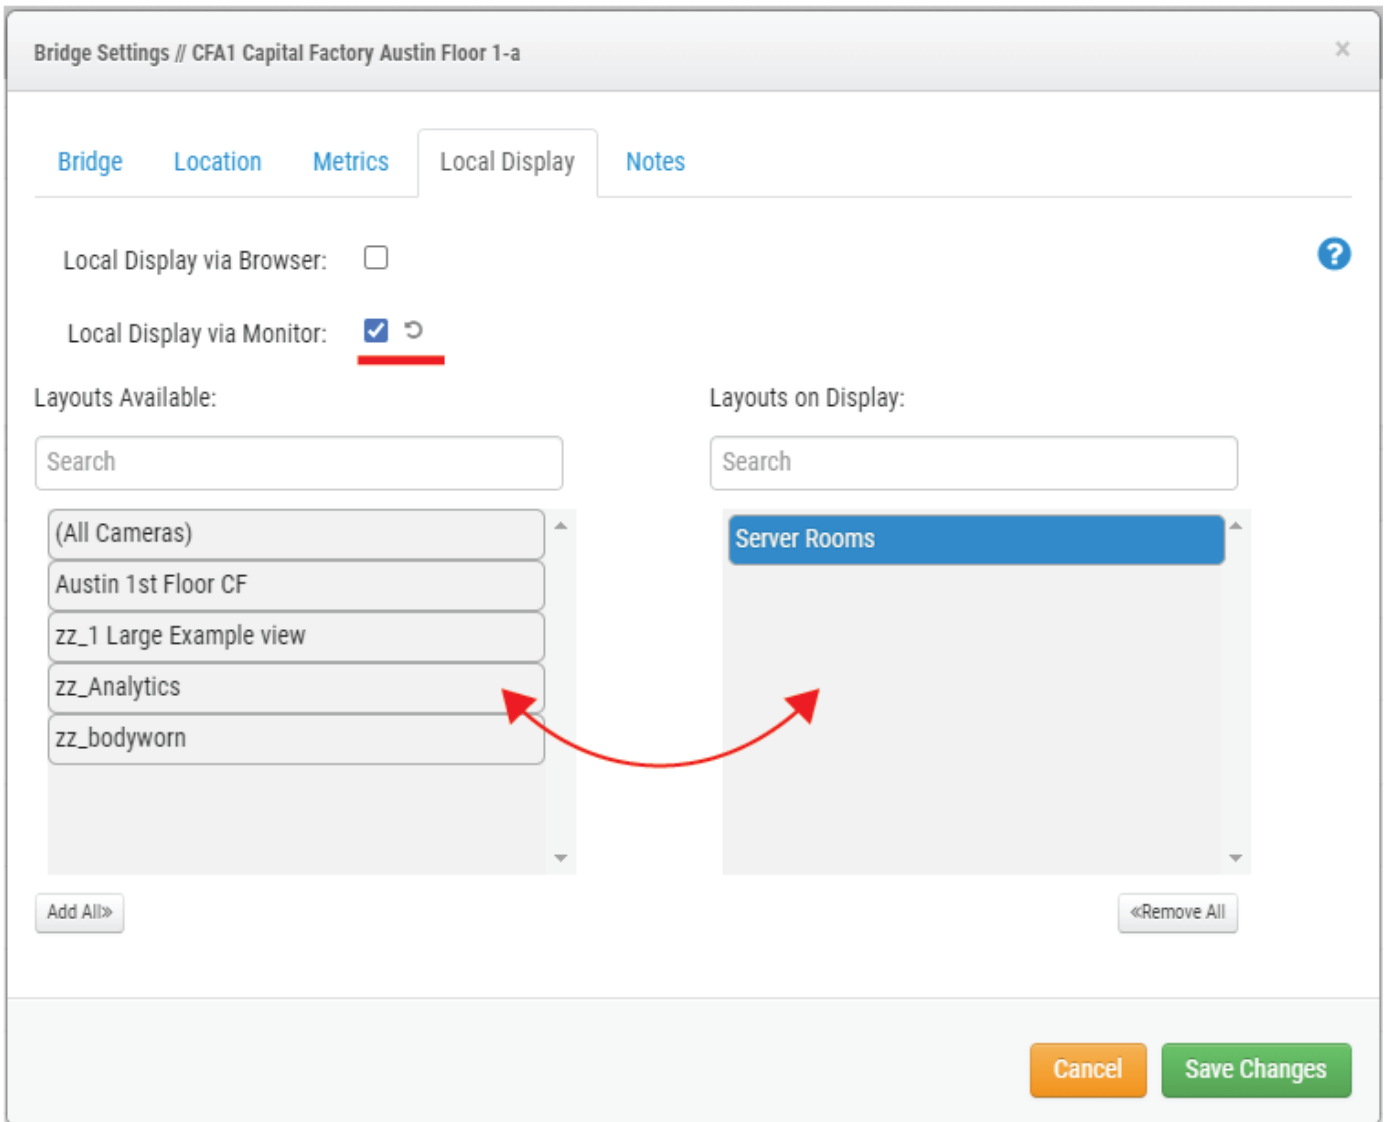


4. Press the **Save Changes** button.


The layout should now appear on the monitor.

Local Display via Browser

Local Display via Browser streams a layout to a computer on the same network as the Eagle Eye Bridge/CMVR.



- ⓘ Local Display via Browser **requires flash support** to view a video in full-resolution mode. If the browser does not support flash, please use [Media Shortcut](#). When enabled, Media Shortcut allows video to be streamed directly over a network. Instead of just accessing a layout, Media Shortcut operates when a user logs in to the Eagle Eye VMS Dashboard on a computer on the same network as the Eagle Eye Bridge/CMVR. Preview and live video will stream directly over the network from the Eagle Eye Bridge/CMVR. Please see our knowledge base article [Media Shortcut](#) for more information on enabling this feature.

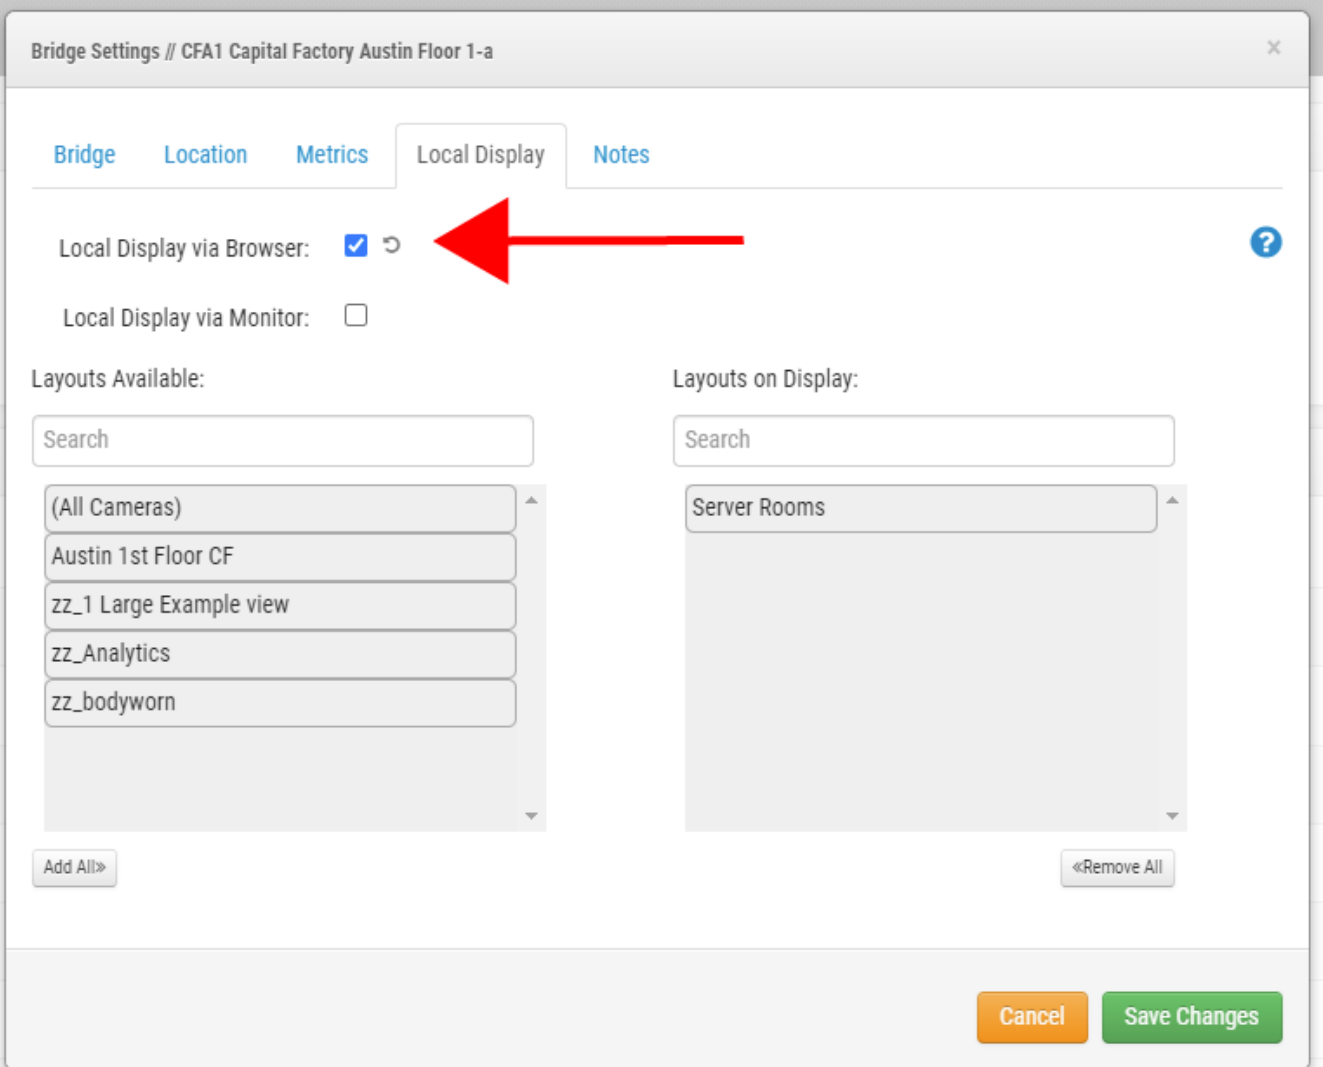1. On the Eagle Eye Cloud VMS Dashboard, navigate to the **Bridge Settings** .
2. Check the box next to **Local Display via Browser**.



Bridge Settings // CFA1 Capital Factory Austin Floor 1-a

Bridge Location Metrics **Local Display** Notes

Local Display via Browser: ↻  

Local Display via Monitor:

Layouts Available:

Search

(All Cameras)
Austin 1st Floor CF
zz_1 Large Example view
zz_Analytics
zz_bodyworn

Add All>

Layouts on Display:

Search

Server Rooms

<<Remove All

Cancel Save Changes

3. Drag the layout you wish to display from **Layouts Available** to the **Layouts on Display**.

Layouts Available:

- (All Cameras)
- Austin 1st Floor CF
- zz_1 Large Example view
- zz_Analytics
- zz_bodyworn

Layouts on Display:

- Server Rooms



4. Type the IP of the bridge into the browser of a computer on the same network.
5. A login prompt will appear. Enter the username and password of an admin user on the account to start the display.

- ⓘ The login credentials must be an end-user on the account. Resellers credentials will not work.

The selected layout will now be displayed in the browser's window.

- 💡 If you have any questions or concerns, please contact us.

US: +1-512-473-0501

EU: 31 (0) 20 26 10 460

ASIA PACIFIC: 81-3-686-5527



<https://support.een.com/portal/en/kb/articles/local-display>